Special Features

- Elegant appearance and easy to use.
- Multi-Code Player - Supporting MP3, WMA, formats.
- Driver Free U Disk - You may manage your files directly through “Portable Device” in “My Computer” on Windows 2000 Operating System or above without driver.

Brief View of Player

A. About player’s battery

Player has an internal, non–user-replaceable rechargeable lithium battery. For best results, the first time you use the player, let it charging for about 1 - 2 hours or until the charging LED lights go Off before you use it.

Charging the Battery

You can charge the Player’s battery in two ways:

1. Connect player to your computer. Or,
2. Use the USB power charger. (available separately)

B. Key function of buttons

Appearance

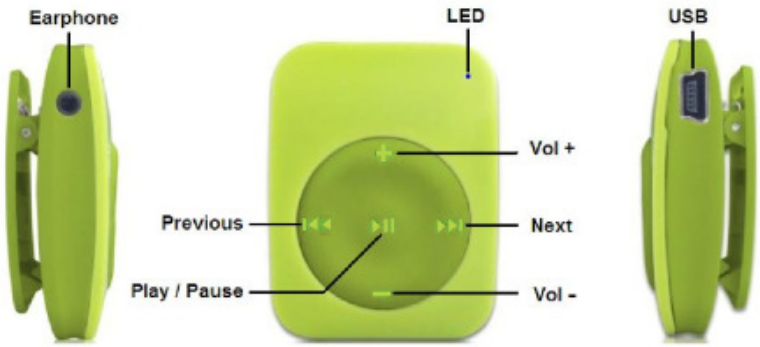

- ⏯ **button:** To Play / Pause, On / Off.
- ⏮ **button:** To previous song or fast-backward.
- ⏭ **button:** To the next song or fast-forward.
- ＋ **button:** To increase volume level.
- － **Button:** To decrease volume level.
- **USB:** For PC connection and charge function

C. Getting start player

1 Turn On / Off

1.1 Plug in earphone set into player's jack

1.2 Press and hold ⏯ button, for about 3 - 4 second, the player will turn On and the music will play directly.

1.3 Press and hold ⏯ button, for about 3 - 4 second, to turn Off the player.

2 Play / Pause Music

2.1 Press ⏯ button to pause the playing music, press it again to play.

2.2 If player is in pause state for 3 minutes, it will be turned to Off automatically.

3 Adjust Volume

3.1 Pressing ＋ / － button to increase or decrease volume level.

3.2 Press and hold ＋ / － button to increase or decrease volume level faster.

3.3 For hearing protection; a beep warning will be heard from earphone every time you increase the volume level and reach to the default setting level, which may exceed 85dB. Press ⏯ button to accept the warning and press ＋ / － button again to increase the level until to maximum level.

4 Play Next / Previous Music

4.1 In playing mode, press ⏭ button to select next music.

4.2 Press ⏮ button to select previous music.

5 Play Fast-Forward / Fast-Backward

5.1 In playing mode, press and hold ⏭ button to enter fast-forward mode.

5.2 Press and hold ⏮ button to enter fast-backward mode.

D. USB mode

1 Connect player to computer

1.1 Connect player to computer with the USB cable, then a “USB Mass Storage Device” is detected and related driver is installed by you computer. (Windows 2000 / XP System or about)

1.2 A removable disk drive will be shown in “My computer” folder, now you can start Read / Write operation. And the battery is charging in background.

1.3 In connection mode, the player can be play music if you press or pressing the play button. However, the player may stop or start playing if removing the PC connection.

2 Remove player from computer:

Please safety to removes the player in computer, otherwise, the data stored in the Player might loss.

2.1 If you’re using a Windows PC, you can disconnect the player in My Computer or by clicking the “Safely Remove Hardware” icon in the Windows system tray.

2.2 If you’re using a Mac, you can also disconnect player by dragging the player icon on the desktop to the Trash.

2.3 And now, is safe to disconnect the player with your computer, unplug the USB connector from player and then your computer.

2.4 If you're accidentally disconnect player without disconnect it, reconnect it to your computer.

2.5 At power ON mode, after remove the PC connection, the player will auto-play the music directly.

E. Indicator light function

- **Playing Mode:** Red light flashing once per second.
- **Pause Mode:** Red light bright.
- **PC Connecting Mode:** Red light bright. (Charging in background)
- **Recharging Mode:** Red light bright.
- **Recharge complete:** Red light will turn OFF

F. Troubleshooting

Play cannot turn ON	• Check whether battery have enough energy.
No sound is heard	• Check whether Volume is set to "minimum" and connect the headphone plugs firmly. • Check whether the headphone plug is dirty. • Corrupted WMA / MP3 may make a static noise and the sound may cut off. Make sure that the music files are not corrupted. • Check whether music files format are support.
Download of music files fails.	• Check whether player's USB connector is connected with computer properly. • Check whether driver is installed correctly. • Check whether the player's memory is in full.

G. Specification

Dimension	45.5 mm (H) x 35 mm (W) x 18 mm (D)	
Weight	15g	
PC Connection	USB 2.0 (High Speed)	
Earphone Impedance	32 Ohm	
Internal Memory	Flash memory: Xemio-243 2GB Xemio-253 4GB	
Battery	Built-in Rechargeable Lithium battery (3.7V 110mA)	
	Playing Time: about 6 – 7 Hours	
Supports Music Format	MP3	32kbps - 320kbps
	WMA	32kbps – 384kbps
Audio	Earphone Output Power	L: 275mVrms + R: 275mV (32 Ohm)
	Frequency Response	20Hz – 20,000Hz
	SNR	80dB
Operation Temperature	-0℃ - 40℃	
Operation Systems	Windows 98/SE/ME2000/XP/Vista, MAC 9.2 or above	

Note: Product design and specification are subject to change without prior notice.

H. Recycling

If at any time in the future you should need to dispose of this product, please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

WARNING: Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.

For information and support, www.lenco.eu